




## MegaBund Floor Bunding Installation Guide

### WHAT YOU NEED

- Dynabolts - these are included in the purchase of each Megabund length
- Soudal Multibond SMX50 Adhesive
- Caulk gun
- Permanent marker or chalk
- Hammer drill with masonry drill bit
- Fine tooth saw
- Socket set
- Vacuum cleaner

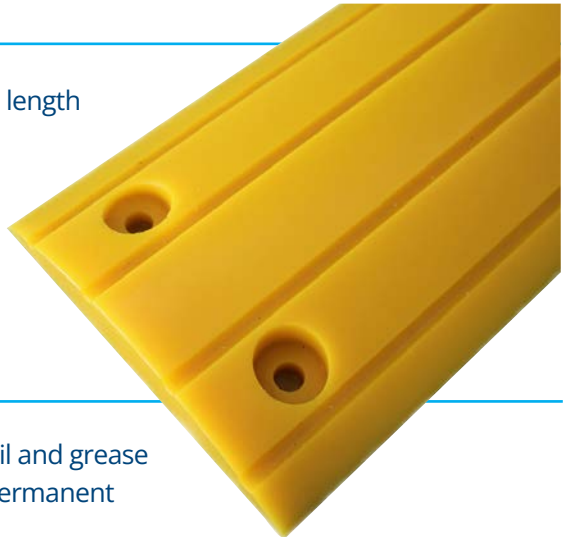

### INSTRUCTIONS

1. To begin, ensure that the installation surface is clean and free of oil and grease
2. Mark out the floor where the Megabund is to be installed with a permanent marker or chalk
3. Using the line as a guide, measure the length required for each section of the bund and cut to match. These can be mitred to change direction
4. Liberally apply Multibond SMX50 sealant underneath the Megabund and on the ends of each adjoining section
5. Place the prepared section of Megabund along the line
6. Using the hammer drill and the predrilled holes in the Megabund as a guide, drill a 12mm diameter hole into the floor, approximately 70mm deep. Vacuum away resulting dust.
7. Insert dynabolts through the bunding and tighten using the socket set until the top is below the surface in the locking bar groove of the Megabund
8. Run a bead of Multibond SMX50 sealant along the inside edge of the bund to provide a final seal
9. Repeat this process until all lengths are in place and the bund has been created.
10. Once the sealant is cured, your long term containment solution is now in place for a safer workplace.

